



Instructions for Flared Bendable Nozzle

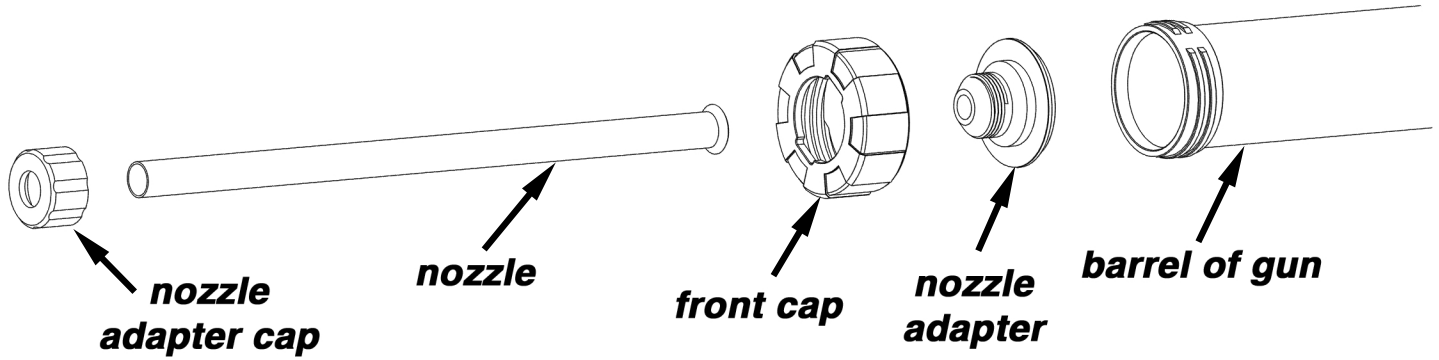


Steps:

- 1. Insert nozzle adapter into barrel.***
- 2. Screw front cap onto barrel.***
- 3. Place nozzle onto nozzle adapter.***
- 4. Thread nozzle adapter cap onto nozzle adapter.***
- 5. Bend nozzle to desired shape.***


step 1

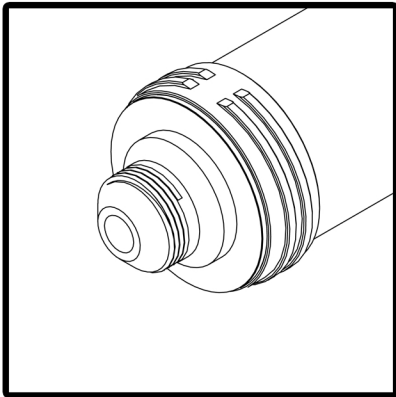


step 2

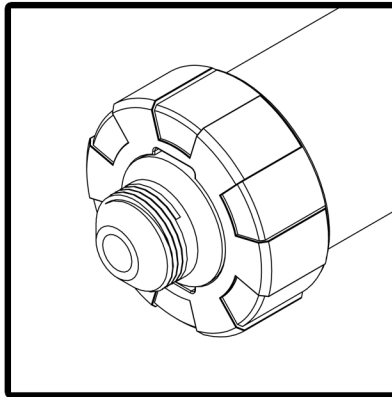

step 3

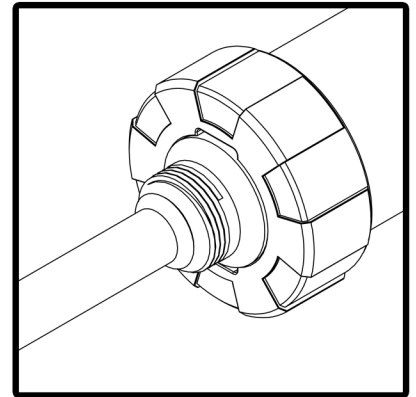

step 4

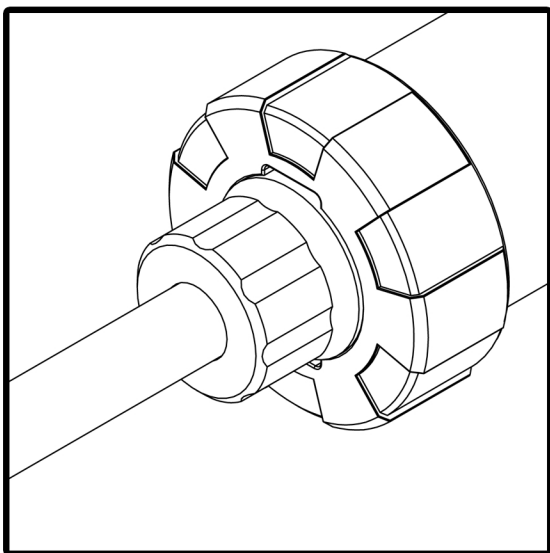

step 5

