



1:1 SET-UP

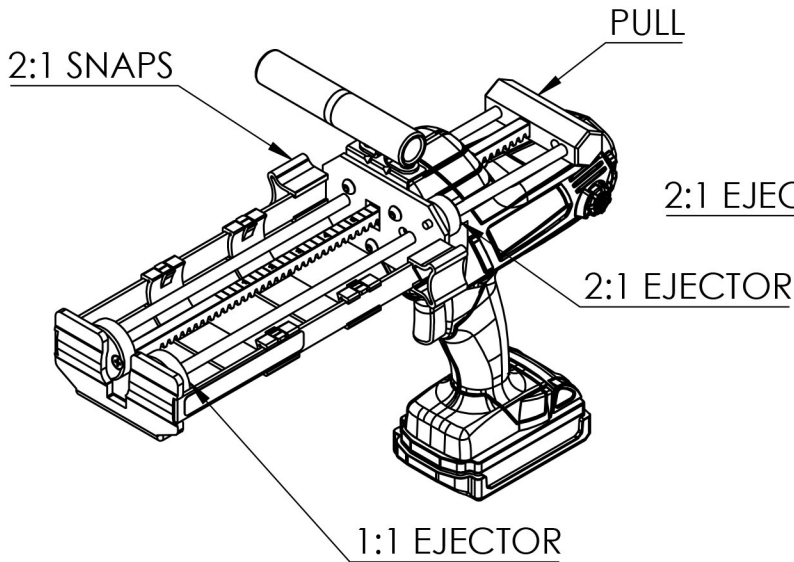

2:1 SET-UP

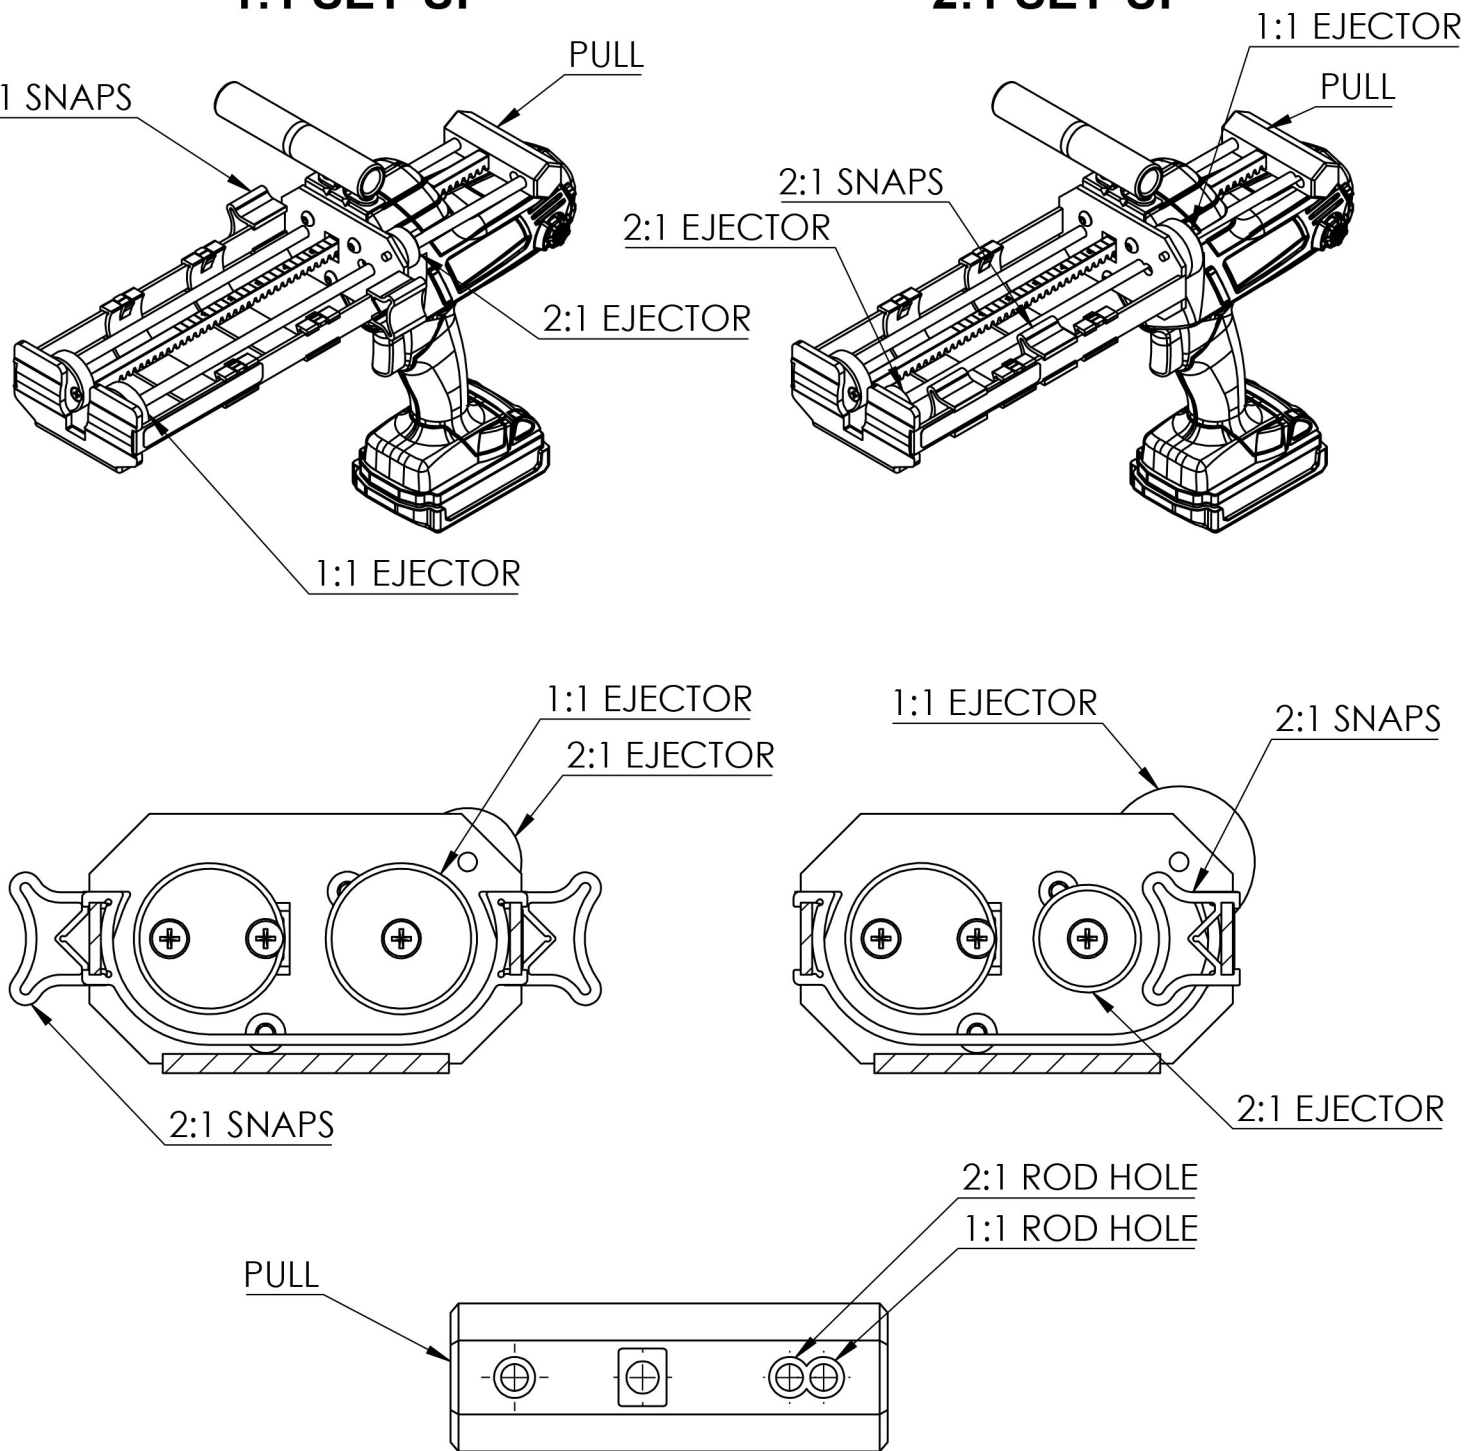

GUN IS ASSEMBLED FROM FACTORY FOR 1:1 CARTRIDGES. FOR USE WITH 2:1 CARTRIDGES, CONVERT GUN USING THE FOLLOWING STEPS.

STEPS:

1. REMOVE 1:1 EJECTOR FROM ROD. REMOVE ROD FROM 1:1 POSITION ON PULL AND PLACE INTO 2:1 POSITION.
2. REMOVE 2:1 EJECTOR FROM REAR OF CARRIAGE AND PLACE ONTO ROD. THE 1:1 EJECTOR CAN NOW BE PLACED ON CARRIAGE. NOTE THE SCREW THAT HOLDS THE EJECTOR TO CARRIAGE IS LONGER AND SHOULD ONLY BE USED TO ATTACH EJECTOR TO CARRIAGE.
3. REMOVE 2:1 SNAPS AND ATTACH THEM TO THE INSIDE OF THE CARRIAGE.